



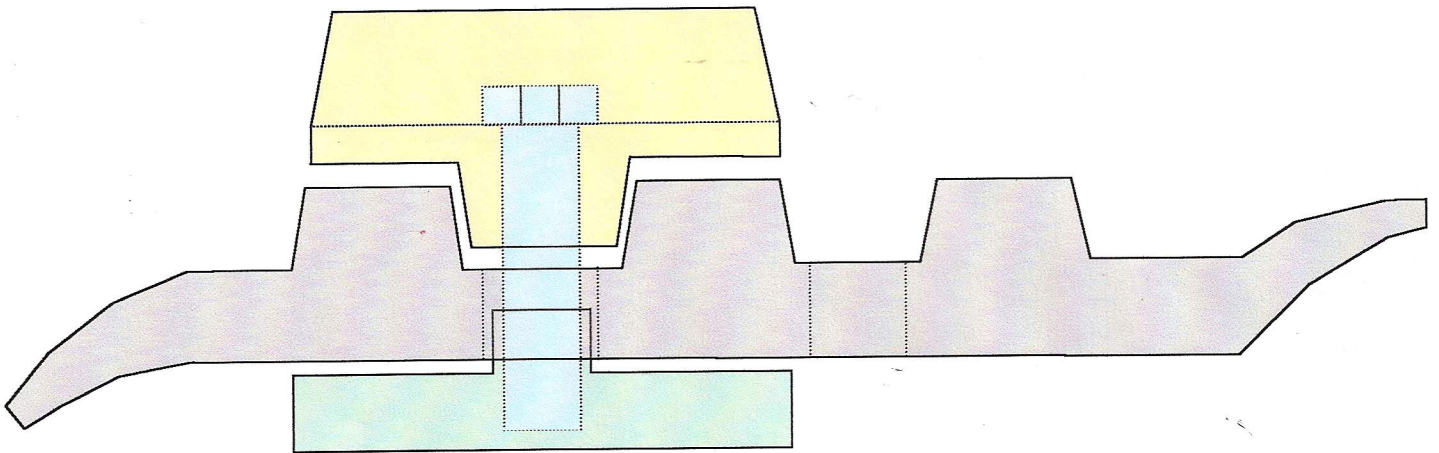


# Montana Track Claws Installation Instructions



-  Top grouser assembly
-  Bottom grouser assembly
-  Track Pad
-  Mounting bolt

1. Fit bottom grouser assembly up underneath track pad between rails. Use clean-out hole closest to side of pad that curves downward.

**Note: edges of bottom grouser assembly may need trimmed to fit between some rails. Use the anti-seize on the threads of the bottom assembly to prevent rusting.**

2. Place top grouser assembly on top of track pad, directly above the clean-out.

3. Drop mounting bolt, fitted with lock-washer, through the bolt hole in top grouser assembly. Then tighten mounting bolt into bottom grouser assembly.

4. After running machine for 2 to 3 hours check the tightness of the bolts. If any debris was trapped between the track pad and the claw it could result in a loose claw.

After that we recommend weekly inspections.